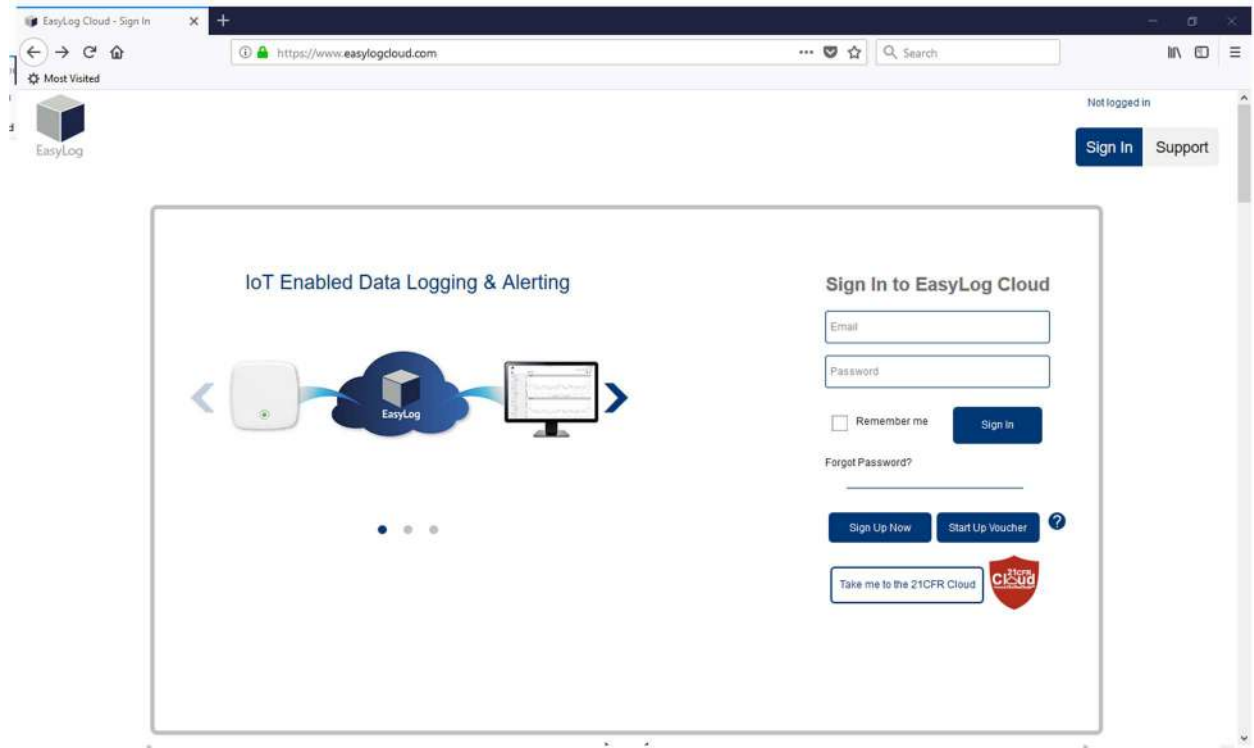

Setup Directions For an iPhone or Android Device

1. Charge the TempSure device.
 - a. Using the included USB cable, plug the Digital Device into a charging plug or into a PC USB port (Step 6).
2. Open any browser to www.easylogcloud.com
3. Set up an account, (it's free) set one up by selecting the Sign Up Now button. If you already have an account, Sign In.



4. On an iPhone download the EasyLogCloud App from the App Store. On Android download the same App from wherever you get your Apps.
5. Open the App when download is complete.
6. Press >Setup Device

7. Select>WiFi Sensor
8. >Follow the instructions on the screen.
9. You will press the button on the bottom of the device.



10. Press the button and cycle through the screens until you see "SETUP-5".
11. Press and hold the button for 5 seconds until "SETUP-A" is displayed.
12. Open the Settings menu on your mobile device.
13. Select 'WiFi' and choose the 'EL-WiFi' device from the list.
14. Return to the EasyLog Cloud App.
15. Follow the instructions on the App and enter the information you prefer for your temperature settings and device.
16. These instructions will guide you to connect your device to your WiFi and set up your device.
17. The App will look like the below screens when you complete the setup and connect to your device.
18. Remember;
 - a. The faster you have your device connect to WiFi and the cloud to up load data, the faster the battery will be depleted and require re-charging.
 - b. If you want a fast upload of temperature, you can keep the device connected to power via the USB cable all the time. This will not damage the unit.



Verizon 12:16 PM 92%

Wood Stove

Device Name

Probes

Sample Rate

Sync Schedule

Alarm Settings

Audio Alarm

Email Alerts

Device Locations

Cancel Apply

Device Graph Events Settings

This screenshot shows the settings menu of the 'Wood Stove' app. The status bar at the top shows 'Verizon', the time '12:16 PM', and a battery level of '92%'. The title 'Wood Stove' is at the top left. The settings menu consists of several scrollable items: 'Device Name', 'Probes', 'Sample Rate', 'Sync Schedule', 'Alarm Settings', 'Audio Alarm', 'Email Alerts', and 'Device Locations'. At the bottom of the settings list, there are two buttons: a red 'Cancel' button and a blue 'Apply' button. A bottom navigation bar with icons for 'Device', 'Graph', 'Events', and 'Settings' is visible at the very bottom.